

P.E.I. DEPARTMENT OF TRANSPORTATION & PUBLIC WORKS

- FUEL SPILL RESPONSE PROCEDURE -

April 2003

“THREE STEPS TO A COMPLETE RESPONSE PROCEDURE”

RESPOND



REQUEST




REPORT

STEP 1 - RESPOND immediately to contain spill, clean up spill, minimize damage;

STEP 2 - REQUEST additional TPW assistance if required to clean up spill;

STEP 3 - REPORT spill following the Flowchart Guide provided below:

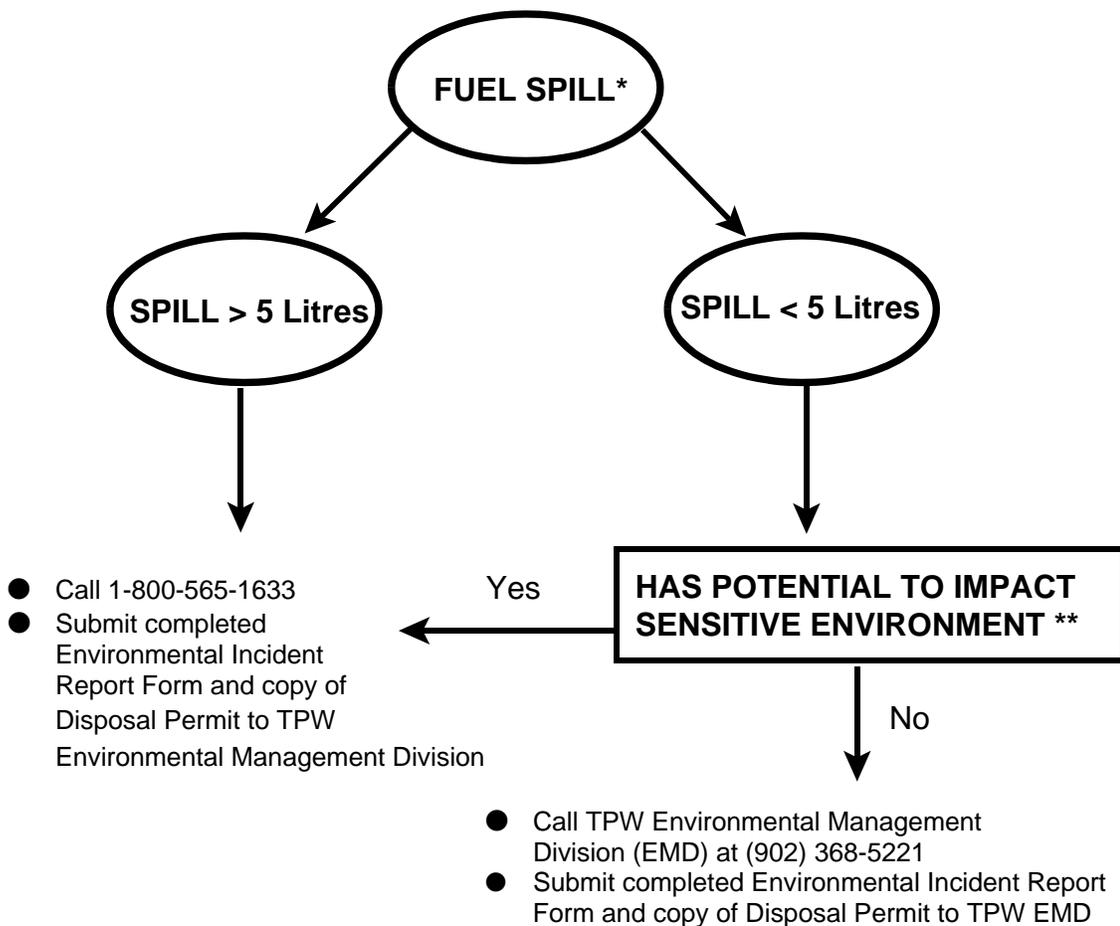

* includes diesel, hydraulic fluid, gas, antifreeze, etc.

** sensitive environment > watercourse or wetland
> sanitary or storm water sewer system
> paved road surface (c/o safety risk)
> private property
> groundwater well